


ENGLISH

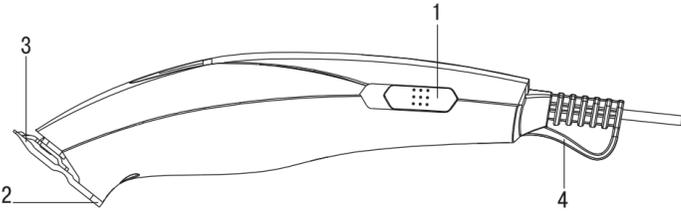

HAIR CLIPPER VT-2574
The hair clipper VT-2574 is a part of the hair clipper set and is intended for hair cutting and trimming.

DESCRIPTION


- 1. Power switch «I/O»
2. Lower blade
3. Upper blade
4. Hanging loop
5. 3 mm attachment comb
6. 6 mm attachment comb
7. 9 mm attachment comb
8. 13 mm attachment comb
9. 18 mm attachment comb
10. 21 mm attachment comb
11. Protective blade cover
12. Comb
13. Scissors
14. Lubricating oil
15. Cleaning brush

ATTENTION!

After using the hair clipper in a bathroom, disconnect the power plug from the mains socket, as water closeness is dangerous even if the unit is switched off. For additional protection you can install a residual current device (RCD) with nominal operation current not exceeding 30 mA into the bathroom mains, contact a specialist for installation.

SAFETY MEASURES

- Read this instruction manual carefully before using the unit and keep it for future reference for the whole unit operation period. Use the unit for intended purposes only, as specified in this manual. Mishandling of the unit may lead to its breakage and cause harm to the user or damage to his/her property.
Before using the unit for the first time, make sure that the voltage in your mains corresponds to unit operating voltage.
The power cord may not:
- touch hot objects and surfaces,
- be immersed into water,
- run over sharp edges of furniture,
- be used as a handle for carrying the unit.
Do not use the unit to cut only natural human hair, hair should be dry.
Switch the hair clipper off during intervals in operation or when you are not using it. Do not allow children to use the unit as a toy.
Do not allow children to touch the hair clipper body and the power cord during the unit operation.
During the unit operation and breaks between operation cycles, place the unit out of reach of children and disabled persons.
This unit is not intended for usage by children.
The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the use of the unit.
Close supervision is necessary when children or disabled persons are near the operating unit.
For children safety reasons do not leave polyethylene bags used as a packaging unattended.
Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
Transport the unit in the original package only.
Keep the unit out of reach of children and disabled persons.

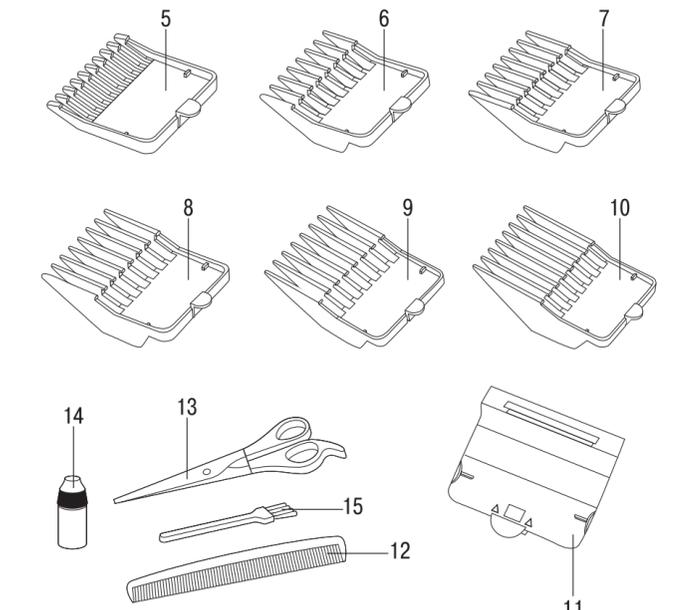

ATTENTION! Do not immerse the hair clipper, the power cord and the plug into water or any other liquids. Do not wash the clipper blades under water jet.

- Do not touch the unit in places with high temperature and relative humidity more than 80%.
Do not keep the unit near a bath or a sink filled with water.
If the unit is dropped into water, unplug it immediately, and only then take it out of the water.
Do not use the unit outdoors.
Never use the unit if the attachment combs are broken or damaged or if the blades are damaged.
After each use clean the attachments and the blades with the brush to remove the cut-off hair.
Make sure that the blades are clean and that there is lubricating oil on them.
Never leave the operating unit unattended.
Switch the hair clipper off during intervals in operation or when you are not using it.
Do not allow children to use the unit as a toy.
Do not allow children to touch the hair clipper body and the power cord during the unit operation.
During the unit operation and breaks between operation cycles, place the unit out of reach of children and disabled persons.
This unit is not intended for usage by children.
The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the use of the unit.
Close supervision is necessary when children or disabled persons are near the operating unit.
For children safety reasons do not leave polyethylene bags used as a packaging unattended.
Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
Transport the unit in the original package only.
Keep the unit out of reach of children and disabled persons.

Cone-shaped haircut

Set the necessary attachment comb and start cutting from the head back towards the crown. Cut hair against hair growth from the head front to crown and on the head sides (pic. 8). To get a flat top haircut, use the comb (12): lift the locks and cut them along the comb. Set the hair with the comb (12) to reveal uneven locks.
After you finish cutting hair, switch the hair clipper off with the switch (1) and put the protective cover (11) on the blades (2, 3).

Cleaning and care

Switch off and unplug the unit.
Clean the blades from hair, using the cleaning brush (15).
Wipe the hair clipper off during intervals in operation or when you are not using it, and then dry them with a soft cloth.
Put the protective cover (11) on the blades (2, 3).
Do not immerse the hair clipper into water or other liquids.
Do not use solvents or abrasives for cleaning the hair clipper body.

Lubricating the blades

Regularly lubricate the blades using the oil (14) supplied with the unit.
Switch the unit off using the power switch (1) and unplug it.
Apply one-two drops of oil (14) on the teeth of the blades (2, 3) and the back side of the upper blade (3), switch the unit on and make sure that the blades are moving smoothly.
Switch the hair clipper off, clean the excess oil with a dry cloth.
Attention! Use only the oil supplied with the set. DO NOT USE vegetable oil, fat, oil mixed with any solvents for lubricating. Solvents will evaporate, leaving thick grease that may slow down the blades' motion.

STORAGE

Before taking the unit away for storage, clean and lubricate the blades (2, 3) with lubricating oil (14) and put the protective cover (11) on.
Keep the hair clipper in a dry cool place out of reach of children and disabled persons.

DELIVERY SET

Hair clipper (with blades) - 1 pc.
Attachment comb - 6 pcs.
Protective cover - 1 pc.
Comb - 1 pc.
Scissors - 1 pc.
Lubricating oil - 1 pc.
Cleaning brush - 1 pc.
Instruction manual - 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V ~ 50 Hz
Rated input power: 10 W

ATTENTION! Do not use the unit near water in the bathrooms, showers, swimming pools etc.

RECYCLING

For environment protection do not throw out the unit and the batteries (if included), do not discard the unit and the batteries with usual household waste. Follow the service life expiration; apply to specialized centers for further recycling. The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

Reminder

Always cut off a little amount of hair at a time - if necessary you can always return to the initial length for additional cutting.
The best haircutting results are reached on dry hair, not wet.
Set the hair with the comb (12) to reveal uneven locks.
It is better to leave longer hair after cutting for the first time.
After learning your clipper better, you will be able to arrange your hair in any style you need.

Attachment combs

The remaining hair length depends on the attachment comb:
- Attachment comb (5): hair length 3 mm
- Attachment comb (6): hair length 6 mm
- Attachment comb (7): hair length 9 mm
- Attachment comb (8): hair length 13 mm
- Attachment comb (9): hair length 18 mm
- Attachment comb (10): hair length 21 mm.
Install the required attachment comb on the blades teeth upwards and press on the ledge on the bottom part of the attachment lid clamping (see the pic. 9). Before cutting hair make sure that the attachment is locked in its socket. To remove the attachment comb press the clamp and remove the attachment.

ENGLISH

Шаг первый
Установите насадку-расческу (5) 3 мм или (6) 6 мм. Включите машинку выключателем (1), установив его в положение «I». Держите машинку таким образом, чтобы лезвия были направлены вверх. Начиная стрижку с задней части головы, медленно перемещайте машинку по направлению вверх. Подстригите все волосы снизу задней части головы и около ушей (рис. 1, 2, 3).

Шаг второй
Сwitch the hair clipper off with the switch (1) by setting it to the «O» position and unplug it, then set the 9 mm attachment comb (7) for longer hair or 13 mm attachment comb (8) and continue cutting hair near top of the head (pic. 4).

Шаг третий - стрижка в области висков
Отключите машинку и извлеките винт сетевого шнура из электрической розетки, установите насадку-расческу (5) 3 мм или (6) 6 мм и продолжите стрижку по направлению к макушке.

Шаг четвертый - стрижка в области темени
Используйте насадку-расческу (7) 9 мм или (8) 13 мм, стригите волосы по направлению от макушки к темени, против направления роста волос.

Шаг пятый - финал пар
In the final stage of hair cutting, remove the attachment comb from the hair clipper, turn the blades of the clipper towards the hair and trim hair on the temples and neck carefully. Do not press the clipper strongly, there is danger of injuries or cuts when open blades come in contact with the skin (pic. 7).

Cone-shaped haircut

Set the necessary attachment comb and start cutting from the head back towards the crown. Cut hair against hair growth from the head front to crown and on the head sides (pic. 8). To get a flat top haircut, use the comb (12): lift the locks and cut them along the comb. Set the hair with the comb (12) to reveal uneven locks.
After you finish cutting hair, switch the hair clipper off with the switch (1) and put the protective cover (11) on the blades (2, 3).

Cleaning and care

Switch off and unplug the unit.
Clean the blades from hair, using the cleaning brush (15).
Wipe the hair clipper off during intervals in operation or when you are not using it, and then dry them with a soft cloth.
Put the protective cover (11) on the blades (2, 3).
Do not immerse the hair clipper into water or other liquids.
Do not use solvents or abrasives for cleaning the hair clipper body.

Lubricating the blades

Regularly lubricate the blades using the oil (14) supplied with the unit.
Switch the unit off using the power switch (1) and unplug it.
Apply one-two drops of oil (14) on the teeth of the blades (2, 3) and the back side of the upper blade (3), switch the unit on and make sure that the blades are moving smoothly.
Switch the hair clipper off, clean the excess oil with a dry cloth.
Attention! Use only the oil supplied with the set. DO NOT USE vegetable oil, fat, oil mixed with any solvents for lubricating. Solvents will evaporate, leaving thick grease that may slow down the blades' motion.

STORAGE

Before taking the unit away for storage, clean and lubricate the blades (2, 3) with lubricating oil (14) and put the protective cover (11) on.
Keep the hair clipper in a dry cool place out of reach of children and disabled persons.

DELIVERY SET

Hair clipper (with blades) - 1 pc.
Attachment comb - 6 pcs.
Protective cover - 1 pc.
Comb - 1 pc.
Scissors - 1 pc.
Lubricating oil - 1 pc.
Cleaning brush - 1 pc.
Instruction manual - 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V ~ 50 Hz
Rated input power: 10 W

ATTENTION! Do not use the unit near water in the bathrooms, showers, swimming pools etc.

RECYCLING

For environment protection do not throw out the unit and the batteries (if included), do not discard the unit and the batteries with usual household waste. Follow the service life expiration; apply to specialized centers for further recycling. The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

Reminder

Always cut off a little amount of hair at a time - if necessary you can always return to the initial length for additional cutting.
The best haircutting results are reached on dry hair, not wet.
Set the hair with the comb (12) to reveal uneven locks.
It is better to leave longer hair after cutting for the first time.
After learning your clipper better, you will be able to arrange your hair in any style you need.

Attachment combs

The remaining hair length depends on the attachment comb:
- Attachment comb (5): hair length 3 mm
- Attachment comb (6): hair length 6 mm
- Attachment comb (7): hair length 9 mm
- Attachment comb (8): hair length 13 mm
- Attachment comb (9): hair length 18 mm
- Attachment comb (10): hair length 21 mm.
Install the required attachment comb on the blades teeth upwards and press on the ledge on the bottom part of the attachment lid clamping (see the pic. 9). Before cutting hair make sure that the attachment is locked in its socket. To remove the attachment comb press the clamp and remove the attachment.

РУССКИЙ

Шаг первый
Установите насадку-расческу (5) 3 мм или (6) 6 мм. Включите машинку выключателем (1), установив его в положение «I». Держите машинку таким образом, чтобы лезвия были направлены вверх. Начиная стрижку с задней части головы, медленно перемещайте машинку по направлению вверх. Подстригите все волосы снизу задней части головы и около ушей (рис. 1, 2, 3).

Шаг второй
Отключите машинку выключателем (1), переведите его в положение «O», и извлеките винт сетевого шнура из электрической розетки, установите насадку-расческу для более длинных волос (7) 9 мм или (8) 13 мм, включите машинку и продолжайте стрижку волос ближе к макушке головы (рис. 4).

Шаг третий - стрижка в области висков
Отключите машинку и извлеките винт сетевого шнура из электрической розетки, установите насадку-расческу (5) 3 мм или (6) 6 мм и продолжите стрижку по направлению к макушке.

Шаг четвертый - стрижка в области темени
Используйте насадку-расческу (7) 9 мм или (8) 13 мм, стригите волосы по направлению от макушки к темени, против направления роста волос.

Шаг пятый - финал пар
In the final stage of hair cutting, remove the attachment comb from the hair clipper, turn the blades of the clipper towards the hair and trim hair on the temples and neck carefully. Do not press the clipper strongly, there is danger of injuries or cuts when open blades come in contact with the skin (pic. 7).

Cone-shaped haircut

Set the necessary attachment comb and start cutting from the head back towards the crown. Cut hair against hair growth from the head front to crown and on the head sides (pic. 8). To get a flat top haircut, use the comb (12): lift the locks and cut them along the comb. Set the hair with the comb (12) to reveal uneven locks.
After you finish cutting hair, switch the hair clipper off with the switch (1) and put the protective cover (11) on the blades (2, 3).

Cleaning and care

Switch off and unplug the unit.
Clean the blades from hair, using the cleaning brush (15).
Wipe the hair clipper off during intervals in operation or when you are not using it, and then dry them with a soft cloth.
Put the protective cover (11) on the blades (2, 3).
Do not immerse the hair clipper into water or other liquids.
Do not use solvents or abrasives for cleaning the hair clipper body.

Lubricating the blades

Regularly lubricate the blades using the oil (14) supplied with the unit.
Switch the unit off using the power switch (1) and unplug it.
Apply one-two drops of oil (14) on the teeth of the blades (2, 3) and the back side of the upper blade (3), switch the unit on and make sure that the blades are moving smoothly.
Switch the hair clipper off, clean the excess oil with a dry cloth.
Attention! Use only the oil supplied with the set. DO NOT USE vegetable oil, fat, oil mixed with any solvents for lubricating. Solvents will evaporate, leaving thick grease that may slow down the blades' motion.

STORAGE

Before taking the unit away for storage, clean and lubricate the blades (2, 3) with lubricating oil (14) and put the protective cover (11) on.
Keep the hair clipper in a dry cool place out of reach of children and disabled persons.

DELIVERY SET

Hair clipper (with blades) - 1 pc.
Attachment comb - 6 pcs.
Protective cover - 1 pc.
Comb - 1 pc.
Scissors - 1 pc.
Lubricating oil - 1 pc.
Cleaning brush - 1 pc.
Instruction manual - 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V ~ 50 Hz
Rated input power: 10 W

ATTENTION! Do not use the unit near water in the bathrooms, showers, swimming pools etc.

RECYCLING

For environment protection do not throw out the unit and the batteries (if included), do not discard the unit and the batteries with usual household waste. Follow the service life expiration; apply to specialized centers for further recycling. The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

Reminder

Always cut off a little amount of hair at a time - if necessary you can always return to the initial length for additional cutting.
The best haircutting results are reached on dry hair, not wet.
Set the hair with the comb (12) to reveal uneven locks.
It is better to leave longer hair after cutting for the first time.
After learning your clipper better, you will be able to arrange your hair in any style you need.

Attachment combs

The remaining hair length depends on the attachment comb:
- Attachment comb (5): hair length 3 mm
- Attachment comb (6): hair length 6 mm
- Attachment comb (7): hair length 9 mm
- Attachment comb (8): hair length 13 mm
- Attachment comb (9): hair length 18 mm
- Attachment comb (10): hair length 21 mm.
Install the required attachment comb on the blades teeth upwards and press on the ledge on the bottom part of the attachment lid clamping (see the pic. 9). Before cutting hair make sure that the attachment is locked in its socket. To remove the attachment comb press the clamp and remove the attachment.

Шаг первый
Установите насадку-расческу (5) 3 мм или (6) 6 мм. Включите машинку выключателем (1), установив его в положение «I». Держите машинку таким образом, чтобы лезвия были направлены вверх. Начиная стрижку с задней части головы, медленно перемещайте машинку по направлению вверх. Подстригите все волосы снизу задней части головы и около ушей (рис. 1, 2, 3).

Шаг второй
Отключите машинку выключателем (1), переведите его в положение «O», и извлеките винт сетевого шнура из электрической розетки, установите насадку-расческу для более длинных волос (7) 9 мм или (8) 13 мм, включите машинку и продолжайте стрижку волос ближе к макушке головы (рис. 4).

Шаг третий - стрижка в области висков
Отключите машинку и извлеките винт сетевого шнура из электрической розетки, установите насадку-расческу (5) 3 мм или (6) 6 мм и продолжите стрижку по направлению к макушке.

Шаг четвертый - стрижка в области темени
Используйте насадку-расческу (7) 9 мм или (8) 13 мм, стригите волосы по направлению от макушки к темени, против направления роста волос.

Шаг пятый - финал пар
In the final stage of hair cutting, remove the attachment comb from the hair clipper, turn the blades of the clipper towards the hair and trim hair on the temples and neck carefully. Do not press the clipper strongly, there is danger of injuries or cuts when open blades come in contact with the skin (pic. 7).

Cone-shaped haircut

Set the necessary attachment comb and start cutting from the head back towards the crown. Cut hair against hair growth from the head front to crown and on the head sides (pic. 8). To get a flat top haircut, use the comb (12): lift the locks and cut them along the comb. Set the hair with the comb (12) to reveal uneven locks.
After you finish cutting hair, switch the hair clipper off with the switch (1) and put the protective cover (11) on the blades (2, 3).

Cleaning and care

Switch off and unplug the unit.
Clean the blades from hair, using the cleaning brush (15).
Wipe the hair clipper off during intervals in operation or when you are not using it, and then dry them with a soft cloth.
Put the protective cover (11) on the blades (2, 3).
Do not immerse the hair clipper into water or other liquids.
Do not use solvents or abrasives for cleaning the hair clipper body.

Lubricating the blades

Regularly lubricate the blades using the oil (14) supplied with the unit.
Switch the unit off using the power switch (1) and unplug it.
Apply one-two drops of oil (14) on the teeth of the blades (2, 3) and the back side of the upper blade (3), switch the unit on and make sure that the blades are moving smoothly.
Switch the hair clipper off, clean the excess oil with a dry cloth.
Attention! Use only the oil supplied with the set. DO NOT USE vegetable oil, fat, oil mixed with any solvents for lubricating. Solvents will evaporate, leaving thick grease that may slow down the blades' motion.

STORAGE

Before taking the unit away for storage, clean and lubricate the blades (2, 3) with lubricating oil (14) and put the protective cover (11) on.
Keep the hair clipper in a dry cool place out of reach of children and disabled persons.

DELIVERY SET

Hair clipper (with blades) - 1 pc.
Attachment comb - 6 pcs.
Protective cover - 1 pc.
Comb - 1 pc.
Scissors - 1 pc.
Lubricating oil - 1 pc.
Cleaning brush - 1 pc.
Instruction manual - 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V ~ 50 Hz
Rated input power: 10 W

ATTENTION! Do not use the unit near water in the bathrooms, showers, swimming pools etc.

RECYCLING

For environment protection do not throw out the unit and the batteries (if included), do not discard the unit and the batteries with usual household waste. Follow the service life expiration; apply to specialized centers for further recycling. The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

Reminder

Always cut off a little amount of hair at a time - if necessary you can always return to the initial length for additional cutting.
The best haircutting results are reached on dry hair, not wet.
Set the hair with the comb (12) to reveal uneven locks.
It is better to leave longer hair after cutting for the first time.
After learning your clipper better, you will be able to arrange your hair in any style you need.

Attachment combs

The remaining hair length depends on the attachment comb:
- Attachment comb (5): hair length 3 mm
- Attachment comb (6): hair length 6 mm
- Attachment comb (7): hair length 9 mm
- Attachment comb (8): hair length 13 mm
- Attachment comb (9): hair length 18 mm
- Attachment comb (10): hair length 21 mm.
Install the required attachment comb on the blades teeth upwards and press on the ledge on the bottom part of the attachment lid clamping (see the pic. 9). Before cutting hair make sure that the attachment is locked in its socket. To remove the attachment comb press the clamp and remove the attachment.

ҚАЗАҚША

Шаг первый
Установите насадку-расческу (5) 3 мм или (6) 6 мм. Включите машинку выключателем (1), установив его в положение «I». Держите машинку таким образом, чтобы лезвия были направлены вверх. Начиная стрижку с задней части головы, медленно перемещайте машинку по направлению вверх. Подстригите все волосы снизу задней части головы и около ушей (рис. 1, 2, 3).

Шаг второй
Отключите машинку выключателем (1), переведите его в положение «O», и извлеките винт сетевого шнура из электрической розетки, установите насадку-расческу для более длинных волос (7) 9 мм или (8) 13 мм, включите машинку и продолжайте стрижку волос ближе к макушке головы (рис. 4).

Шаг третий - стрижка в области висков
Отключите машинку и извлеките винт сетевого шнура из электрической розетки, установите насадку-расческу (5) 3 мм или (6) 6 мм и продолжите стрижку по направлению к макушке.

Шаг четвертый - стрижка в области темени
Используйте насадку-расческу (7) 9 мм или (8) 13 мм, стригите волосы по направлению от макушки к темени, против направления роста волос.

Шаг пятый - финал пар
In the final stage of hair cutting, remove the attachment comb from the hair clipper, turn the blades of the clipper towards the hair and trim hair on the temples and neck carefully. Do not press the clipper strongly, there is danger of injuries or cuts when open blades come in contact with the skin (pic. 7).

Cone-shaped haircut

Set the necessary attachment comb and start cutting from the head back towards the crown. Cut hair against hair growth from the head front to crown and on the head sides (pic. 8). To get a flat top haircut, use the comb (12): lift the locks and cut them along the comb. Set the hair with the comb (12) to reveal uneven locks.
After you finish cutting hair, switch the hair clipper off with the switch (1) and put the protective cover (11) on the blades (2, 3).

Cleaning and care

Switch off and unplug the unit.
Clean the blades from hair, using the cleaning brush (15).
Wipe the hair clipper off during intervals in operation or when you are not using it, and then dry them with a soft cloth.
Put the protective cover (11) on the blades (2, 3).
Do not immerse the hair clipper into water or other liquids.
Do not use solvents or abrasives for cleaning the hair clipper body.

Lubricating the blades

Regularly lubricate the blades using the oil (14) supplied with the unit.
Switch the unit off using the power switch (1) and unplug it.
Apply one-two drops of oil (14) on the teeth of the blades (2, 3) and the back side of the upper blade (3), switch the unit on and make sure that the blades are moving smoothly.
Switch the hair clipper off, clean the excess oil with a dry cloth.
Attention! Use only the oil supplied with the set. DO NOT USE vegetable oil, fat, oil mixed with any solvents for lubricating. Solvents will evaporate, leaving thick grease that may slow down the blades' motion.

STORAGE

Before taking the unit away for storage, clean and lubricate the blades (2, 3) with lubricating oil (14) and put the protective cover (11) on.
Keep the hair clipper in a dry cool place out of reach of children and disabled persons.

DELIVERY SET

Hair clipper (with blades) - 1 pc.
Attachment comb - 6 pcs.
Protective cover - 1 pc.
Comb - 1 pc.
Scissors - 1 pc.
Lubricating oil - 1 pc.
Cleaning brush - 1 pc.
Instruction manual - 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V ~ 50 Hz
Rated input power: 10 W

ATTENTION! Do not use the unit near water in the bathrooms, showers, swimming pools etc.

RECYCLING

For environment protection do not throw out the unit and the batteries (if included), do not discard the unit and the batteries with usual household waste. Follow the service life expiration; apply to specialized centers for further recycling. The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

Reminder

Always cut off a little amount of hair at a time - if necessary you can always return to the initial length for additional cutting.
The best haircutting results are reached on dry hair, not wet.
Set the hair with the comb (12) to reveal uneven locks.
It is better to leave longer hair after cutting for the first time.
After learning your clipper better, you will be able to arrange your hair in any style you need.

Attachment combs

The remaining hair length depends on the attachment comb:
- Attachment comb (5): hair length 3 mm
- Attachment comb (6): hair length 6 mm
- Attachment comb (7): hair length 9 mm
- Attachment comb (8): hair length 13 mm
- Attachment comb (9): hair length 18 mm
- Attachment comb (10): hair length 21 mm.
Install the required attachment comb on the blades teeth upwards and press on the ledge on the bottom part of the attachment lid clamping (see the pic. 9). Before cutting hair make sure that the attachment is locked in its socket. To remove the attachment comb press the clamp and remove the attachment.

Шаг первый
Установите насадку-расческу (5) 3 мм или (6) 6 мм. Включите машинку выключателем (1), установив его в положение «I». Держите машинку таким образом, чтобы лезвия были направлены вверх. Начиная стрижку с задней части головы, медленно перемещайте машинку по направлению вверх. Подстригите все волосы снизу задней части головы и около ушей (рис. 1, 2, 3).

Шаг второй
Отключите машинку выключателем (1), переведите его в положение «O», и извлеките винт сетевого шнура из электрической розетки, установите насадку-расческу для более длинных волос (7) 9 мм или (8) 13 мм, включите машинку и продолжайте стрижку волос ближе к макушке головы (рис. 4).

Шаг третий - стрижка в области висков
Отключите машинку и извлеките винт сетевого шнура из электрической розетки, установите насадку-расческу (5) 3 мм или (6) 6 мм и продолжите стрижку по направлению к макушке.

Шаг четвертый - стрижка в области темени
Используйте насадку-расческу (7) 9 мм или (8) 13 мм, стригите волосы по направлению от макушки к темени, против направления роста волос.

Шаг пятый - финал пар
In the final stage of hair cutting, remove the attachment comb from the hair clipper, turn the blades of the clipper towards the hair and trim hair on the temples and neck carefully. Do not press the clipper strongly, there is danger of injuries or cuts when open blades come in contact with the skin (pic. 7).

Cone-shaped haircut

Set the necessary attachment comb and start cutting from the head back towards the crown. Cut hair against hair growth from the head front to crown and on the head sides (pic. 8). To get a flat top haircut, use the comb (12): lift the locks and cut them along the comb. Set the hair with the comb (12) to reveal uneven locks.
After you finish cutting hair, switch the hair clipper off with the switch (1) and put the protective cover (11

