



## ENGLISH

### ELECTRIC KETTLE VT-7062

The liquid heating appliance (kettle) is intended for boiling drinking water only.

#### DESCRIPTION

1. Kettle body
2. Kettle spout and mesh filter
3. Lid
4. Lid opening button
5. Handle
6. Water level scale
7. ON/OFF button
8. Light indication
9. Base
10. Cord storage

#### NOTES:

- Fill the kettle with water up to the maximal mark «MAX», determine the water level using the scale (6).

- Close the lid (3), place the kettle on the base (9). Make sure that the kettle lid (3) is closed tightly.
- To switch the kettle on press the on/off button (7) (the button will be fixed in the lower position), the light indication (8) will light up.
- Once water starts boiling, the kettle will be switched off automatically, the button (7) will switch to the upper position and the light indication (8) will go out. Pour water out and repeat the water boiling procedure 2-3 times.

#### Notes:

- Before using the kettle, make sure that the on/off button (7) is not blocked by any foreign objects, and the lid (3) is tightly closed, otherwise auto switch off of the kettle is not possible.
- Before removing the kettle from the base, make sure that the kettle is switched off (that means the on/off button (7) is in the upper position).

#### ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA, to install RCD, contact a specialist.

#### SAFETY MEASURES

Before using the unit, read this manual carefully and keep it for future reference.

Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

• Make sure that the unit is intended purpose only and in strict accordance with the instruction manual.

• Make sure that your home mains voltage corresponds to the voltage specified on the unit.

• The power cord is equipped with a «europlug»; plug it into the socket with a reliable grounding contact.

• To avoid the risk of fire, do not use adapters for connecting the kettle to the mains.

• When removing the kettle from the base (9), make sure that it is switched off (the button (7) is in the upper position).

• After switching the kettle off, wait for 10-20 seconds, then you can switch it on again after re-boiling.

• If you accidentally switch the kettle on, but the water level appears to be below the minimal mark, the automatic thermal switch will be on and the kettle will be switched off automatically. In this case take the kettle from the base (9), let it cool down for 10-15 minutes, then fill it with water and switch it on, the kettle will operate in normal mode.

**Notes:** - There is a cord storage (10) on the reverse side of the base (9). You can adjust the optimal power cord length by folding it in the cord storage in a corresponding way.

#### CLEANING AND MAINTENANCE

- Before cleaning disconnect the unit from the mains, pour out water and let the kettle cool down.

- Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

- Use only the base supplied with the unit.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

- Do not touch the power cord and the power plug with wet hands.

- Do not switch the kettle on if it is empty.

- Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush.

- Install the filter back to its place until clicking.

- Do not immerse the kettle and the base in any other liquids.

- Do not wash the kettle and the base in a dishwashing machine.

</div

